



Basic operation on the map screen

Switching the view mode

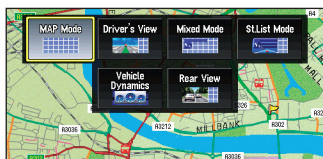

Press the **MAP** button while displaying the map screen. This navigation system allows you to select different view modes depending on your preference.


Scrolling the map

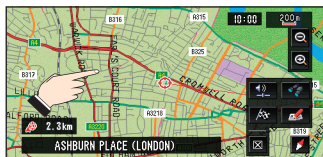

Touch and hold where you would like to scroll to on the map screen. After a few seconds, the scrolling will begin.

Traffic information on the map

Traffic conditions can be overlaid on the map when there is traffic information transmitted by FM radio service through the Radio Data System (RDS-TMC).

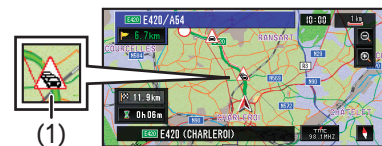

- (1) **Traffic event**
- Stationary traffic
 - Slow and queuing traffic
 - Closed/blocked roads
 - Other event (e.g. accident)

Selecting the AV source

Touch the **AV source icon** to select the desired **AV source**.



(1) AV source icon

Sources that can be used from the beginning:

- DISC** [CD, ROM, DVD-V, DivX]
- RADIO** [Tuner]

Sources that need connection to an optional pioneer equipment (sold separately) or external equipment:

- iPod** [iPod]
- USB** [USB-Audio]
- BT-TEL** [Bluetooth-Telephone]
- BT-AUDIO** [Bluetooth-Audio]
- M-CD** [Multi-CD player]
- M-DVD** [Multi-DVD player]



(2) **OFF** [Switch to source off]


Selecting the video for rear display

Touch **REAR SCREEN** to switch the video source for the rear display in the following order.

Mirror (Same as front) – **DVD** (DISC) – **AV1** (AV-1) – **AV2** (AV-2)

Operation of AV operation screens

DISC source screen(e.g. DVD-V)

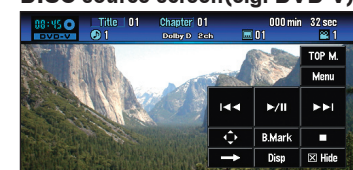

Touch the screen to display touch panel keys, when you play the DVD-Video.

Touch Panel keys

▶/|| Playback and Pause

⏮/⏭ Skip the track/chapter forward or backward

■ Stop playback



Display touch panel keys to operate the DVD menu

RADIO source screen



▲Up/▼Down

Switch the radio station

◀Seek/Seek▶

Seek tuning (keep touching for about one second and release).

Band


Switch between bands:
FM1 – FM2 – FM3 – MW/LW

Playing your Apple iPod®

You can control an iPod by connecting the iPod cable (CD-I200) (sold separately) to the navigation system.

1 Display the **[AV MENU]**.

2 Touch the **iPod** icon to display the iPod source screen.

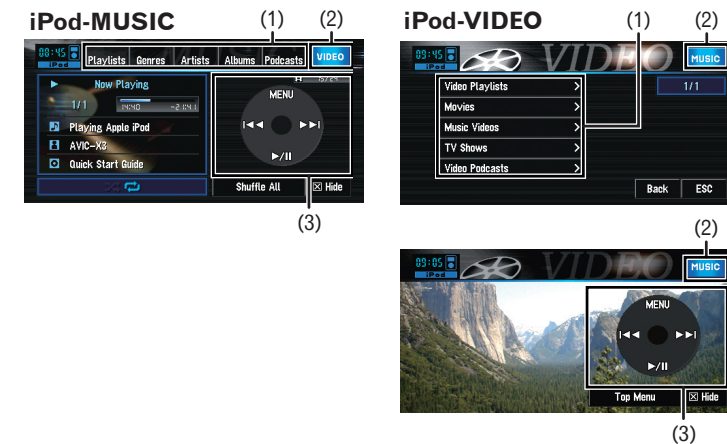

(1) Touch one of the categories in which you want to search for a song or video.

(2) Touch to switch between the video screen and the music screen.

(3) Touch keys to operate the music/video source.